



Gasurveyor 700

Kratke upute za upotrebu


Ove upute odnose se na osnovni GS700.
Vaša konfiguracija monitora može se razlikovati.

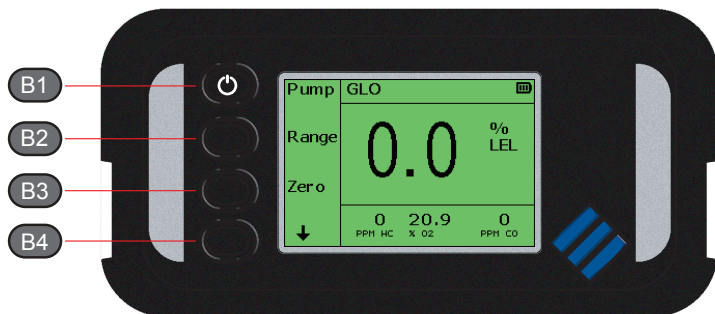

Uključivanje

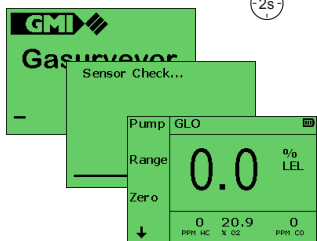

Isključivanje

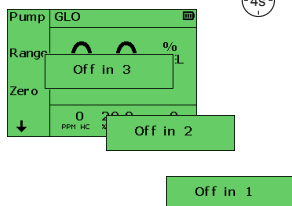


Promjena načina rada




Mode

- B1 Gas Leak Outdoors
- B2 Purge
- B3 Search
- B4 Confined Space


Crpka uključena/isključena

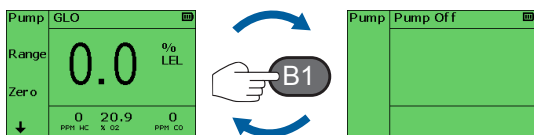


Ogledna pogreška

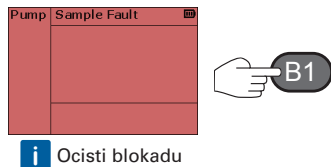


Postavljanje na nulu

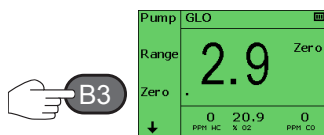


Svježi zrak

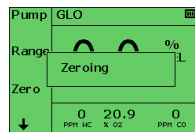


Potvrda alarma

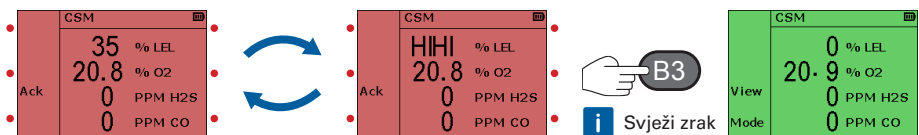


Plinsko ispitivanje cjevovoda

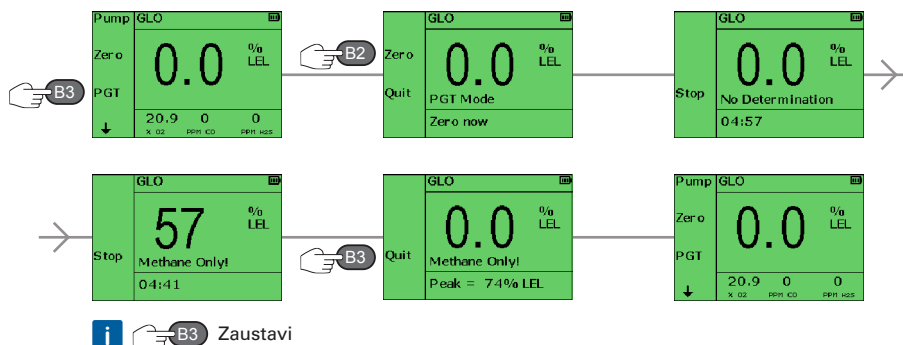

Barhole Test - nova serija

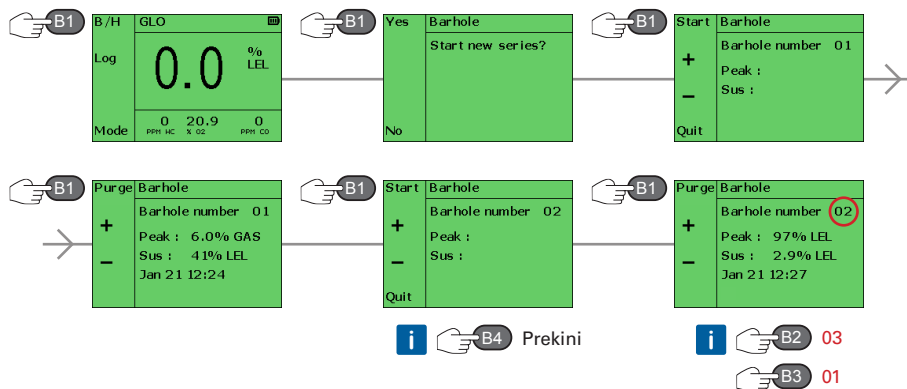

Zamjena baterije

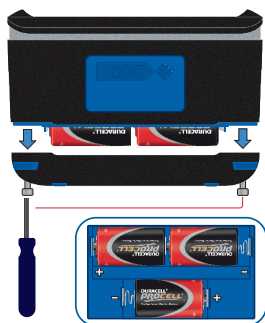

Punjenje

